

# MODEL BTO. SERIES 1

**PARTS  
AND  
OPERATER  
MANUAL**

**Cutting  
Widths  
70"  
to  
10'0"**

**Domries Enterprises, Inc**

**12281 Rd 29**

**Madera, California 93638**

**Phone (559) 673-9143**

**Fax (559) 673-4110**

**Visit our Web-Site at [www.domriesentinc.com](http://www.domriesentinc.com)**

## **IMPORTANT! PLEASE READ!**

TO OUR CUSTOMER – USER’S RESPONSIBILITY – WARRANTY

### **TO OUR CUSTOMER**

The following pages and illustrations are printed to help supply you with the knowledge to better operate and service your new **DOMRIES** equipment.

We are proud to have you as a customer and feel you will be proud to be a **DOMRIES** owner.

Any piece of equipment needs, and must have a certain amount of service and maintenance to keep it in top running condition. We have attempted to cover all the adjustments required to fit most conditions; however, there may be times special care must be taken to fit a condition.

**Study this operator’s manual carefully and become acquainted with all the adjustments and operating procedures before attempting to operate your new equipment.** Remember, it is a machine and has been designed and tested to do an efficient job in most operating conditions and will perform in relation to the service it receives.

If special attention is required for some conditions, ask your **DOMRIES** dealer; his Parts and Service Organization will be glad to help and answer any question on operation and service of your new machine.

### **ATTENTION! BECOME ALERT!**

#### **YOUR SAFETY IS INVOLVED**

This symbol is used to call your attention to safety precautions that should be followed by the operator to avoid accidents. When you see this symbol – Heed Its Warning.

#### **USER’S RESPONSIBILITY**

It is the responsibility of the user to read the Operator’s Manual and understand the safe and correct operating procedures as pertains to the operation of the product, and to lubricate and maintain the product according to the maintenance schedule in the Operator’s Manual.

The user is responsible for inspecting his machine and for having parts repaired or replaced when continued use of the product would cause damage or excessive wear to other parts. It is the user’s responsibility to deliver his machine to a **DOMRIES** dealer, for service or replacement of defective parts which are covered by the standard warranty. When requesting warranty service, you present your copy of delivery record.

**MODEL#** \_\_\_\_\_

**SERIAL#** \_\_\_\_\_



## Safety Precautions

**ATTENTION! BECOME ALBERT!  
YOUR SAFETY IS INVOLVED!**

**This symbol is used to call your attention to safety precautions. That should be followed by the operator to avoid accidents. When you see this – Heed Its Warning.**

**Many hours of lost time and much suffering is caused by the failure to practice simple safety rules.**

1. **READ** this manual carefully to acquaint your - self with the Disk Harrow. Opening unfamiliar equipment can cause accidents.
2. **LOWER IMPLEMENT** if possible, when adjusting maintenance work; otherwise **BLOCKS IT SECURELY** at a workable height.
3. When Implement and tractor are parked always lower disk to the ground and place a **FLAG OR OTHER WAARMING DEVICE** on each corner as someone could run or bump into the implement.
4. Implement should be **DETACHED ONLY** in an area where Children **DO NOT PLAY**.
5. **DO NOT** wear loose fitting clothing that could catch on various parts.
6. Machinery should be **OPERATED ONLY** by those who are **RESPONSIBLE AND DEEGATED** to do so.
7. **ONLY ONE PERSON** – the operator – should be permitted on the tractor when implement is in operation, he should be thoroughly familiar with tractor and implement.
8. **MAKE CERTAIN** that everyone is in clear before starting tractor and implement combination.
9. **BEFORE WORKING** under the any hydraulically controlled unit IS SURE it is **SECURELY BLOCKED**.
10. The **RATE OF SPEED** on hillsides or curves should be regulated so there is no danger of tipping.
11. **DO Not** drive too close to the edge of a ditch or creek.
12. **REDUCE SPEED** when transporting unit to avoid bouncing and momentary loss of steer ability.
13. **MAKE CERTAIN** tractor is equipped with sufficient front end weight to counter-balance the plow weight and maintain stability of front of tractor.
14. **DO NOT** attempt to operate tractor and implement unless you are in the diver seat.
15. **ALWAYS** place transmission in **PARK or NEUTRAL, LOCK BRAKES,STOP ENGINE AND REMOVE START KEY** before dismounting from the tractor.
16. **NEVER** stand between tractor and disc when hitching.
17. **PROVIDE** a first aid kit. Treat all scratches, cuts, etc. with proper antiseptic immediately.
18. If **DECALS** become damaged or come off, they should be replaced immediately.
19. **REMEMBER** that safe operation is no accident.

## ON HIGHWAY OPERATION

1. Use the **SLOW MOVING** vehicle emblem in daytime and approved warning lights at night, or during other periods of poor visibility, to prevent highway accidents.
2. **COMPLY** with Local highway regulation concerning moving machinery on highways.
3. **MAINTAIN** complete Control of machines at all times when traveling on the highway.
4. Due to the width of the implement, **US EXTRA CAUTION** on highways, far lanes and when approaching gates.

**Domries Enterprises, Inc.**

12281 Road 29  
Madera, CA 93637



**Phone (559) 673-9143**

**Fax (559) 673-4110**

**www.domreisentinc.com**

## **WARRANTY**

Domries warrant's all products of it's manufacture to be free of defects in material and workmanship under normal usage and maintenance for the period of one year from the date of delivery to the original purchaser.

### **RETURN GOODS**

Domries shall have the option of requiring the prepaid return of any parts claimed defective, however, No parts shall be returned without Domries warranty form with good authorized number. Goods shall be returned to such location as shall be designed by Domries.

Domries will at it's option, either repair or replace, F.O.B. Domries factory. Such parts as appear to to Domries upon inspection, to have been defective in materials and/or workmanship. Wearing parts that are determined to be defective are subject to an adjustment based upon useful life.

### **REPAIRS**

Any field or repairs must have the authorized repair number from Domries before any work is done. Claim for warranty must be made with a Domries warranty form and repair number.

Domries will not accept any charged other than its direct Dealer shop labor costs and part required to remedy such parts and/or workmanship at its Dealer place of business. The WARRANTY specifically excludes any charges for delivery, transportation, and/or shipping cost.

If the dealer is requested by the customer to travel or haul the machine to his shop or repair shop for the purpose of performing a warranty obligation or free inspection, it would be for the customers convenience, and the cost of such a trip is to be paid by the customer. Any arrangement whereby the Dealer agrees to absorb all or a part of the cost is to be made between the Dealer and the Customer. To be considered a courtesy to the Customer by their Dealer.

### **LIMITED WARRANTY**

Outside purchase equipment and accessories (not of Domries manufacture) are warranted only to the extent of the original manufacture's warranty to Domries.

Item limited - Hydraulic cylinders and hose - Bearings - Disc Blades - Wheels - Tires - Tubes - Seals.

No Warranty shall be paid by Domries before the part or parts and labor have been paid to Domries by the manufacturer. Domries shall then compensate the dealer or customer.

### **NO WARRANTY**

(1) New product that has been subjected to operation in excess in recommended capacities, misused, negligence, lack of maintenance or accident or have been altered or repaired in any manner not authorized by Domries.

(2) Sharp turns while machine is ground void warranty, with the exception of a drag disc.

Domries shall in no event be responsible for any delay or any other consequential or indirect damage in connection with fulfilling any obligation under this WARRANTY.


Domries reserves the right to make change at any time in designs, materials and/or specifications of it's product without becoming liable or obligated in any way to make similar changes in previously manufactured products.

This WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES COVERING DOMRIES PRODUCTS and no other Warranties expressed or implied are made or authorized by Domries Enterprises, Inc.

This WARRANTY BECAME EFFECTIVE with shipments made on or after August 1st 1998


Ref #	Part #	Hitch Assembly	Wt./lb	List Price
1.	BT-10-10	Angel Set Hitch Pin	2	
2.	BT-10-11	Outer Tube-DB Angle Set	25.6	
3.	BT-10-12	Inner Tube-DB Angle Set	8.8	
4.	BT-10-13	Draw Bar BTO Series 1 Offset	60	
5.	BT-10-14	Cross Member Hitch	102	
6.	BT-10-15	Hitch Pin BTO Series 1	5	
7.	OH-136	Hose Guide </td <td>4.2</td> <td></td>	4.2	
8.	OH-136-C	Clamping-Strap	0.9	
9.	OL-133	Tongue-Pin	3.1	
10.	OL-134	Clevis Type Tongue	13.8	
11.	OL-135	Single Lip Tongue	11	

**MODEL- BTO-1**

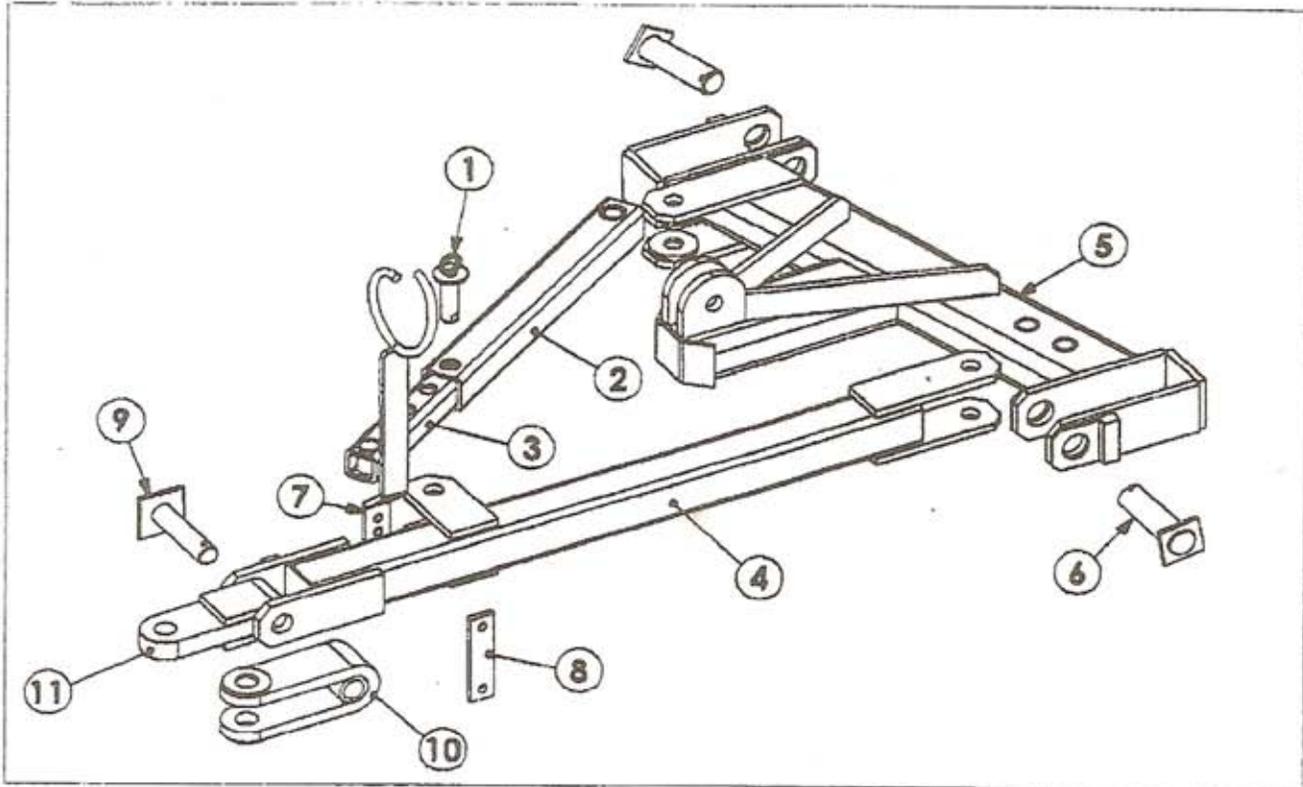


Ref#	Part#	Leveling Rod Assembly	Wt./lb	List Price
1.	BT-10-17	Body-Turnbuckle	7.2	\$ 78.30
2.	BT-10-27	Hammer-Leveling	17	\$ 82.08
3.	BT-10-28	Link-Leveling	17.3	\$ 38.34
4.	BT-10-29	Rocker Weldment (Swivel)	13.9	\$ 75.06
5.	BT-10-52	Spring Guide-Double	1.9	\$ 18.58
6.	BT-10-53	Spring Guide-Single	1.9	\$ 18.14
7.	BT-10-149	Leveling Rod	19.5	\$ 98.82
8.	OH-150	Spring Leveling	5.8	\$ 64.35
9.	BT-20-08-16	Swivel, Leveling Rod	0.1	\$ 56.50
10.	SN114	Slotted Nut-1 1/4nc, Hex	0.5	\$ 4.75
11.	OH-140	Rod-Turnbuckle, LH Thd	4.2	\$ 30.78
12.	OH-143	Rod-Turnbuckle, RH Thd	4.2	\$ 30.78
13.	JJ-60	Clip; Lock, Drag Link	0.2	\$ 6.32
14.	CP14	Cotter Pin		
15.	OH-145	Cross Pin	2.5	\$ 14.85
16.	OH-148	Rocker Pin	0.7	\$ 12.15

MODEL- BTO-1

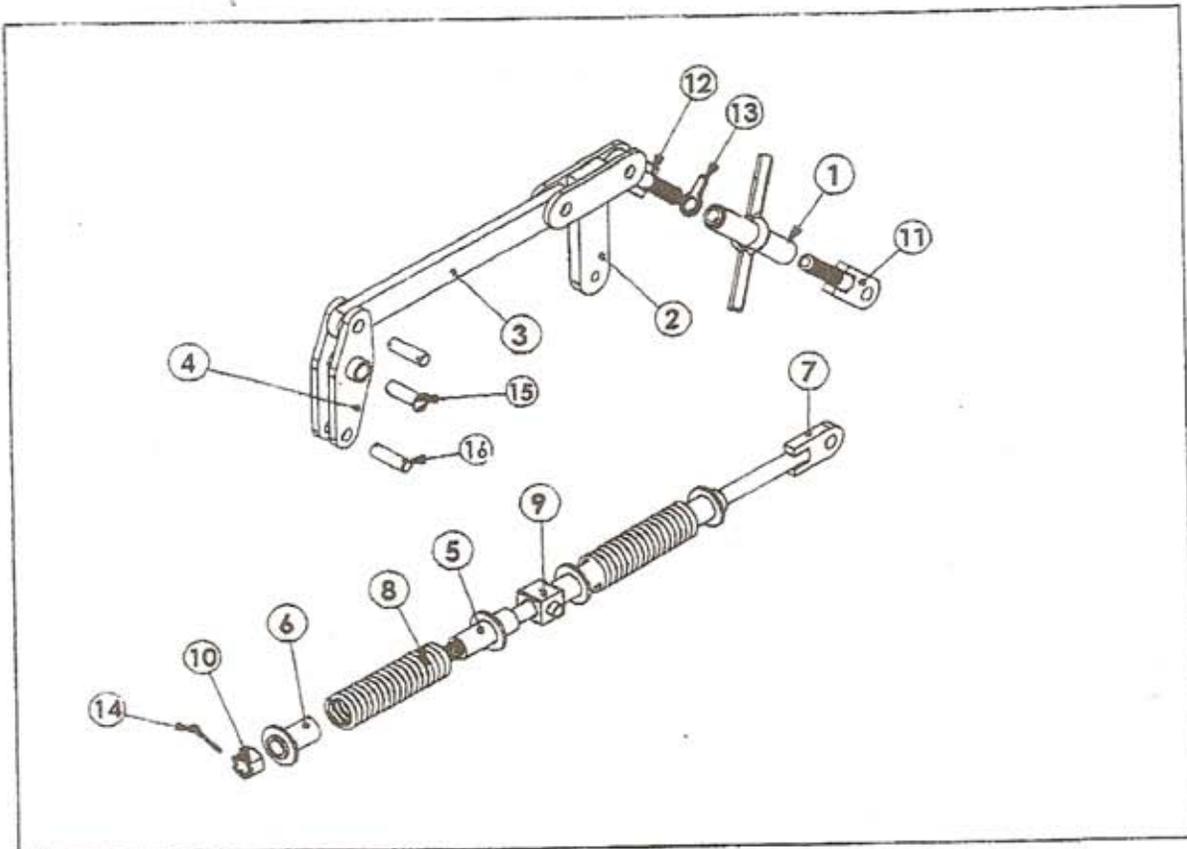


Ref #	Part #	Main Frame Assembly	Wt./lb	List Price
1.	BT-10-1	Main Frame-BTO Series 1	635	
2.	JJ-16	Axle-Block, 2 1/2"d	5	
3.	JJ-90	Hyd. Cylinder-3"dx12"stroke	30	
4.	RPO-136	U' Bolt-1"d	4.9	
5.	LW1	Spring Lock Washer	0.1	
6.	N1	Nut - 1"nc, Hex	0.1	
7.	N114	Nut - 1 1/4nc, Hex	0.6	
8.	CS13-5	Bolt - 1"ncx3"lg	0.9	
9.	CS11412-5	Bolt - 1 1/4ncx12lg	7	
10.	W1029	Flat Washer	0.3	

### MODEL- BTO-1

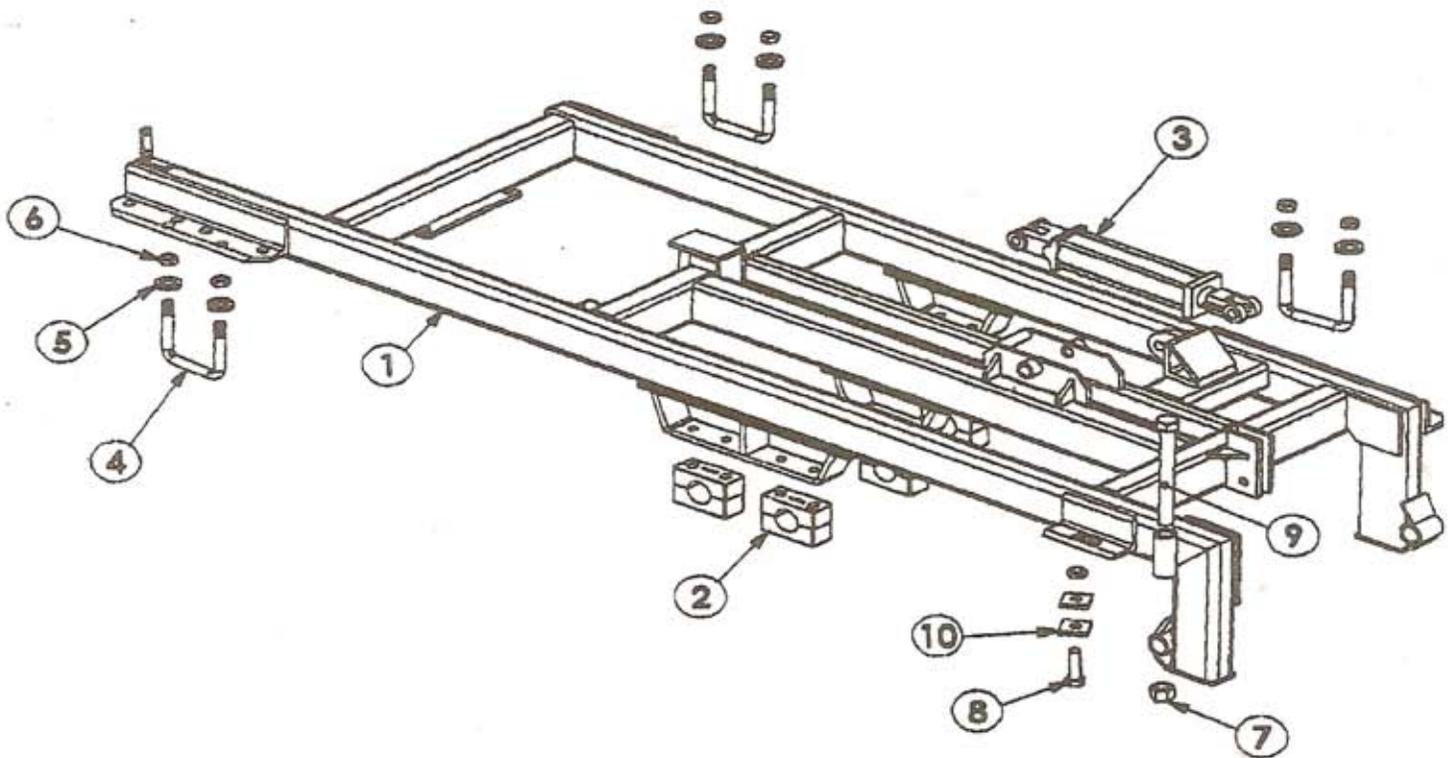


Ref #	Part #	Split Axle Assembly	Wt./lb	List Price
1.	BT-10-01A	Crank Assy-Split Type Axle	6	
2.	BT-10-05	Strap Swivel	5.3	
3.	BT-10-07	Axle Half Assy-RH, Series 1	75	
4.	BT-10-08	Axle Half Assy-LH, Series 1	157	
5.	BT-10-63	Set Bar Depth Control	23.5	
6.	BT-20-02	Swivel Nut-Threaded	1.6	
7.	BT-20-03	Swivel Nut-Plain	1.5	
8.	BT-20-06	Bushing-Crank Swivel	0.1	
9.	OH-126	Set Bar Pin	0.6	
10.	OH-148	Pin Rocker	0.7	

**MODEL - BTO-1**

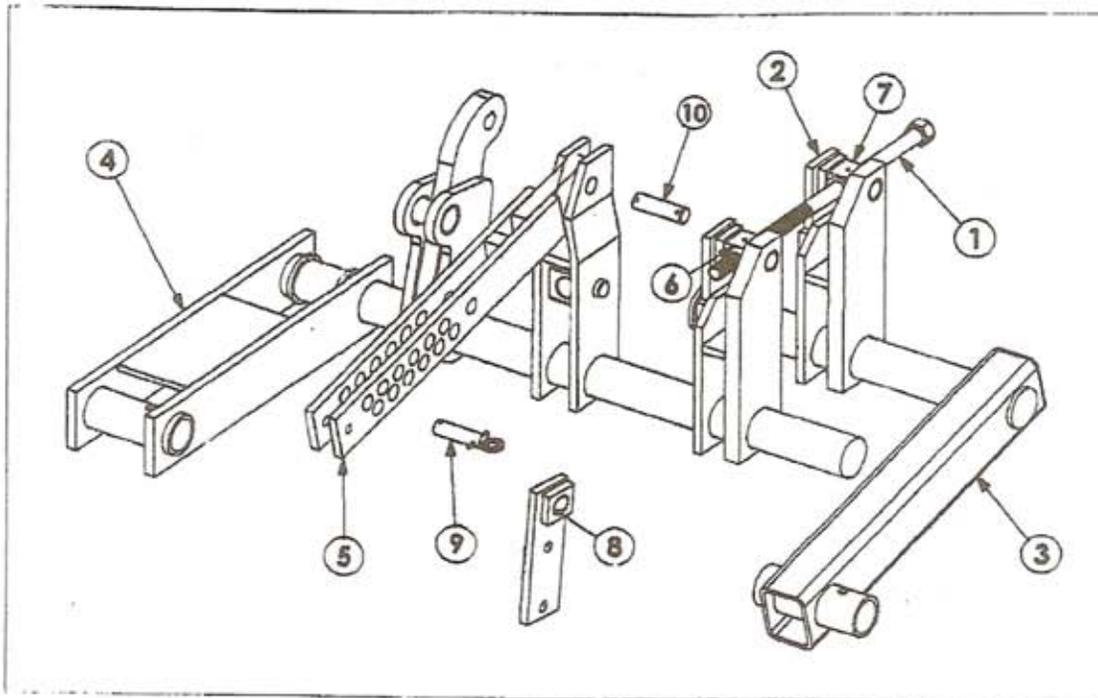


Ref #	Part #	Spindle Assembly	Wt./lb	List Price
1.	DSH-302	Hub	10	
2.	DSH-303	Bearing Cup, Outer	0.1	
3.	DSH-304	Bearing Cone, Outer	0.3	
4.	DSH-305	Bearing Cup, Inner	0.2	
5.	DSH-306	Bearing Cone-Inner	0.4	
6.	DSH-307	Inner Seal	0.1	
7.	DSH-308	Outer Seal	0.1	
8.	DSH-309	Tubing Sleeve	0.3	
9.	DSH-310	Clamp Assy	0.31	
10.	DSH-312-S	Slip in Spindle	9	
11.	DSH-313	Slotted Nut	0.1	
12.	DSH-314	Spindle Washer	0.01	
13.	DSH-316	Dust Cap	0.2	
14.	DSH-318	Lug Bolt-(1/2"nfx1"Long)	0.1	
15.	JJ-19	Wheel-15x6, 6(1/2)	23	
16.	JJ-20	Tire-7.60-15, Rib 6 Ply	24	

**MODEL- BTO-1**

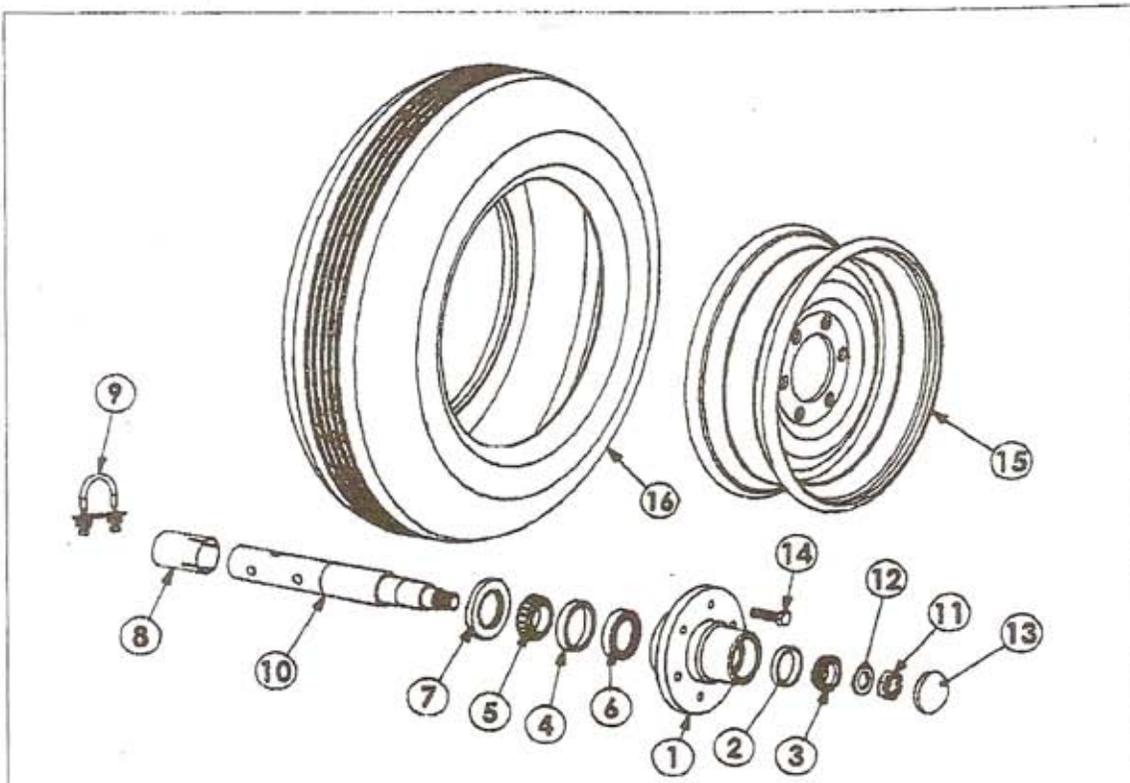

Ref #	Part #	Gang Frame	Wt./lb	List Price
1.	BT-10-16F	Gang Frame-8 Blade, Front	202	
	BT-10-18F	Gang Frame-9 Blade, Front	218	
	BT-10-20F	Gang Frame-10 Blade, Front	234	
	BT-10-22F	Gang Frame-11 Blade, Front	250	
	BT-10-24F	Gang Frame-12 Blade, Front	267	
	BT-10-26F	Gang Frame-13 Blade, Front	284	
	BT-10-28F	Gang Frame-14 Blade, Front	301	
2.	BT-10-16R	Gang Frame-8 Blade, Rear	192	
	BT-10-18R	Gang Frame-9 Blade, Rear	208	
	BT-10-20R	Gang Frame-10 Blade, Rear	225	
	BT-10-22R	Gang Frame-11 Blade, Rear	241	
	BT-10-24R	Gang Frame-12 Blade, Rear	258	
	BT-10-26R	Gang Frame-13 Blade, Rear	274	
	BT-10-28R	Gang Frame-14 Blade, Rear	290	

**MODEL- BTO-1**

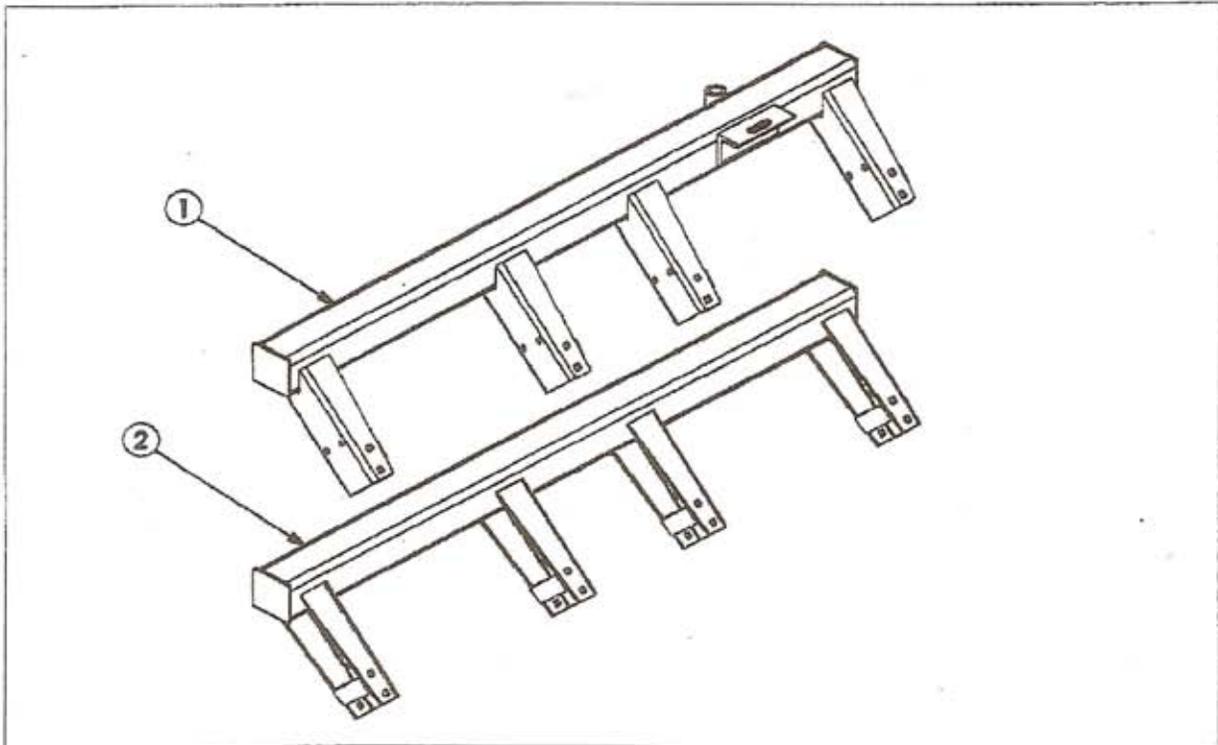


Ref #	Part #	Gang Assembly	Wt./lb	List Price
1.	XGR-4	Gang Rod-1 1/2sq, 4 Blade, 9"	20	\$ 53.24
	XGR-5	Gang Rod-1 1/2sq, 5 Blade, 9"	26	\$ 57.24
	XGR-6	Gang Rod-1 1/2sq, 6 Blade, 9"	32	\$ 61.56
	XGR-7	Gang Rod-1 1/2sq, 7 Blade, 9"	38	\$ 66.96
	XGR-8EL	Gang Rod-1 1/2sq 8 Blade, 9"	44.2	\$ 83.70
	XGR-9EL	Gang Rod-1 1/2sq 9 Blade, 9"	50.2	\$ 93.96
2.	JXE-18	Ext. Washer-CVX 1 1/2sq	9	\$ 34.11
3.	JXE-19	Ext. Washer-CCV 1 1/2sq	8	\$ 34.11
4.	RPO-129D-KIT	Brg. Assy. 1 1/2" Ear Type	11.4	\$ 111.25
5.	RPO-104	Full Spool 1 1/2"SQ, 9"	19.4	\$ 52.75
6.	RPO-113	Half Spool - CVX, 1 1/2sq	10.7	\$ 52.25
7.	RPO-114	Half Spool - CCV, 1 1/2sq	5.8	\$ 36.75
8.	RPO-117	Mtg. Strap-Flat, Brg	3.7	\$ 16.95
9.	RPO-133	Offset Bearing Guard	7.5	\$ 19.95
10.	LW112	Lock Washer-Spring	0.2	\$ 1.80
11.	SN112	Slotted Nut 1 1/2"nc	0.8	\$ 6.25
12.	CP14	Cotter Pin		

#### RPO-129D-KIT


1.	RPO81	Bearing Housing-1 1/2sq, Ear Type	6.4	\$ 41.25
2.	RPO-103D	Gang Bearing Assy 1 1/2sq	3.5	\$ 63.50
3.	RPO-99	Retaining Ring	0.1	\$ 4.15

#### MODEL- BTO-1

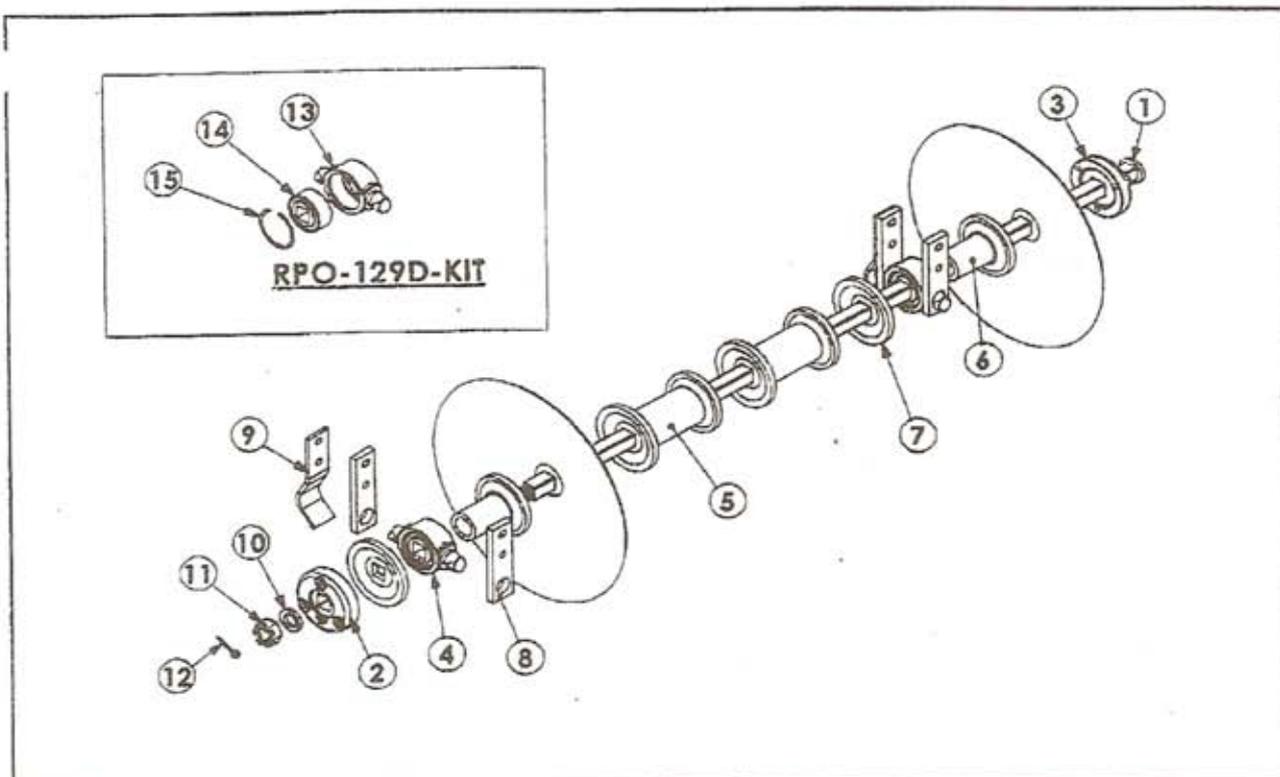

Ref #	Part #	Cleaner Bar Assembly	Wt./lb	List Price
1.	BT-308	Scraper-Bar	13.4	
	BT-309	Scraper-Bar	15.3	
	BT-310	Scraper-Bar	17.2	
	BT-311	Scraper-Bar	19.2	
	BT-312	Scraper-Bar	21.2	
	BT-313	Scraper-Bar	23.2	
	BT-314	Scraper-Bar	24.2	
	2.	RPO-15	Scraper-Blade	2.5
3.	RPO-116+clip	Scraper-Arm	3	
4.	RPO-120	Scraper-Clip Arm	0.4	
5.	CS12434-5	Bolt-1/2ncx4 3/4lg	0.3	
6.	CS12312-5	Bolt-1/2ncx3 1/2lg	0.3	
7.	LW12	Lock Washer-Spring	0.1	
8.	N12	Nut-1/2nc, Hex	0.1	

**MODEL- BTO-1**

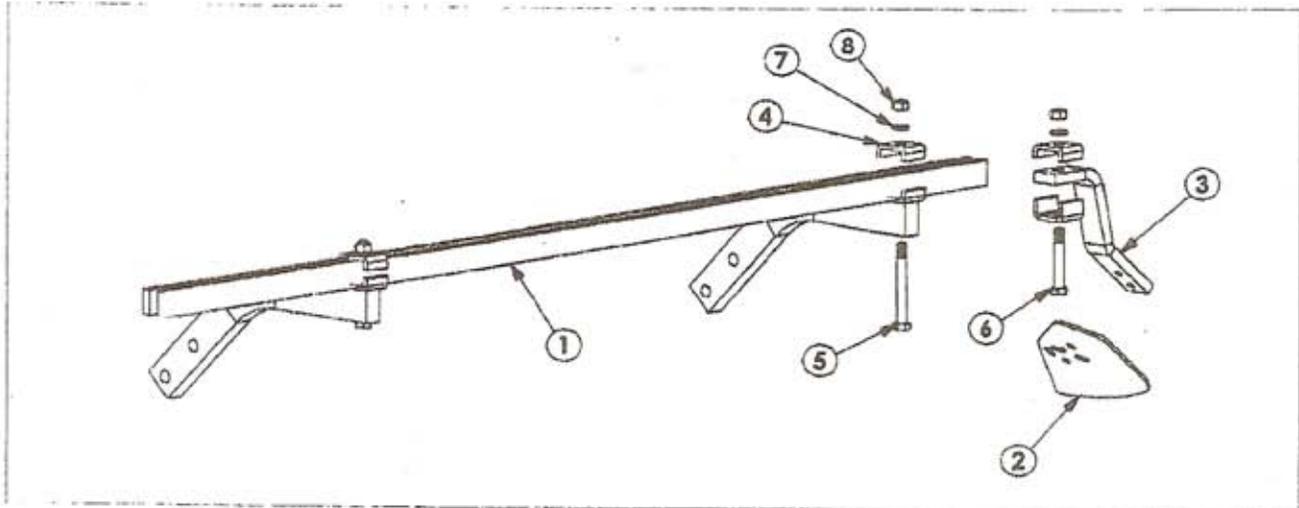

Ref #	Part #	Extension Spool Assembly	Wt./lb	List Price
1.	JXE-17	Ext. Spool-(Blade Pulls In) 9"	11	
2.	JXE-20	Cap-Ext. Spool, Universal, 1 1/2	3	
3.	CS12112-5	Bolt-1/2ncx1 1/2lg, GR 5	0.1	
4.	LW12	Lock Washer-Spring	0.1	
5.	N12	Nut-1/2nc, Hex	0.1	
6.	CS58112-5	Bolt-5/8ncx1 1/2lg GR 5	0.3	
7.	LW58	Lock Washer-Spring,	0.1	
8.	EXB-24"	Ext. Blade-24"d Sld Edg, 1 1/2sq	25	
	EXB-24N	Ext. Blade-24"d Ntched, 1 1/2sq	23	
	EXB-26"	Ext. Blade-26"dia, Solid Edge	31.5	

**MODEL- BTO-1**

